

1/13

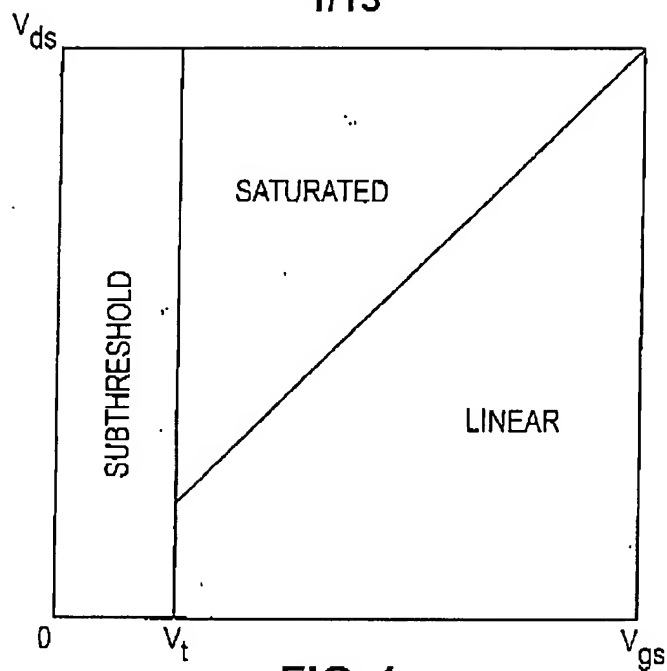


FIG. 1

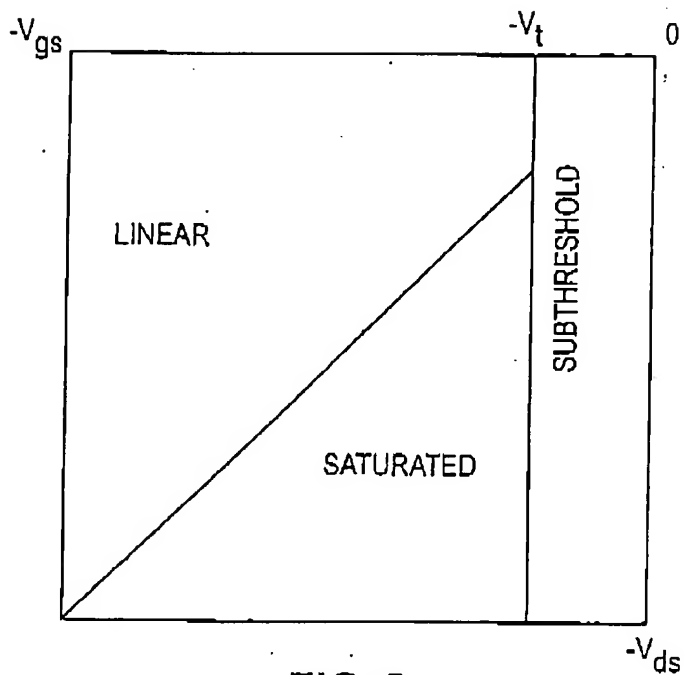


FIG. 2

2/13

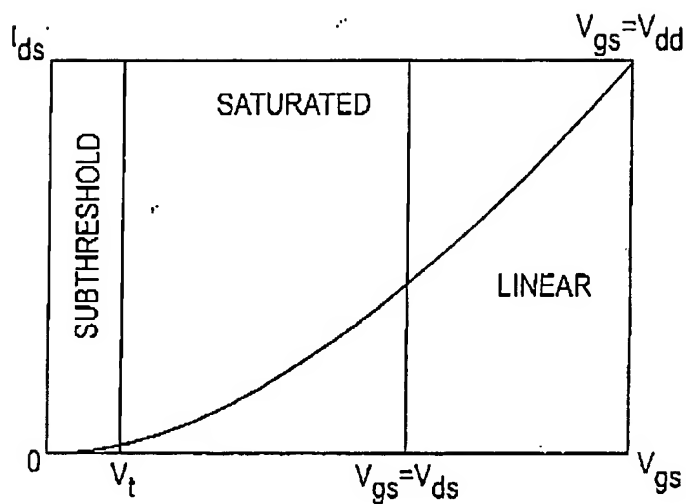


FIG. 3

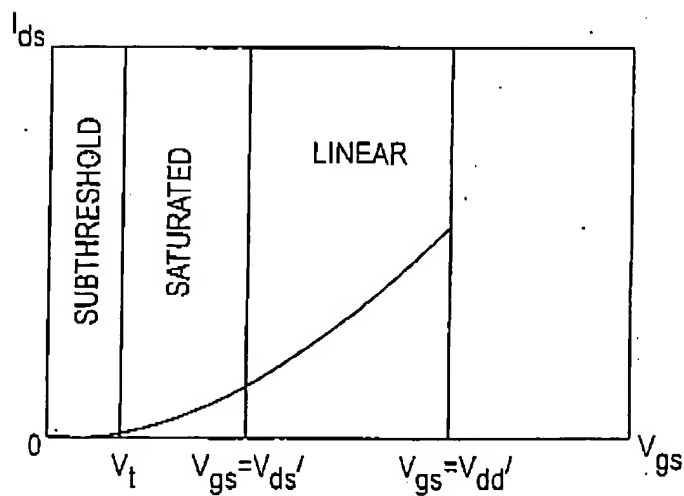


FIG. 4

3/13

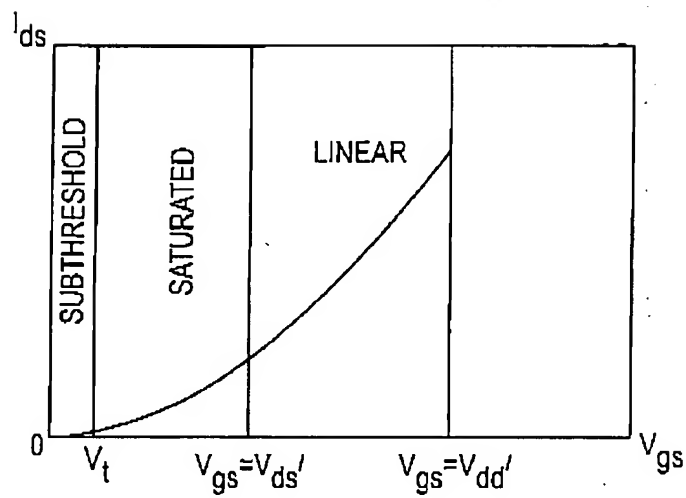


FIG. 5

4/13

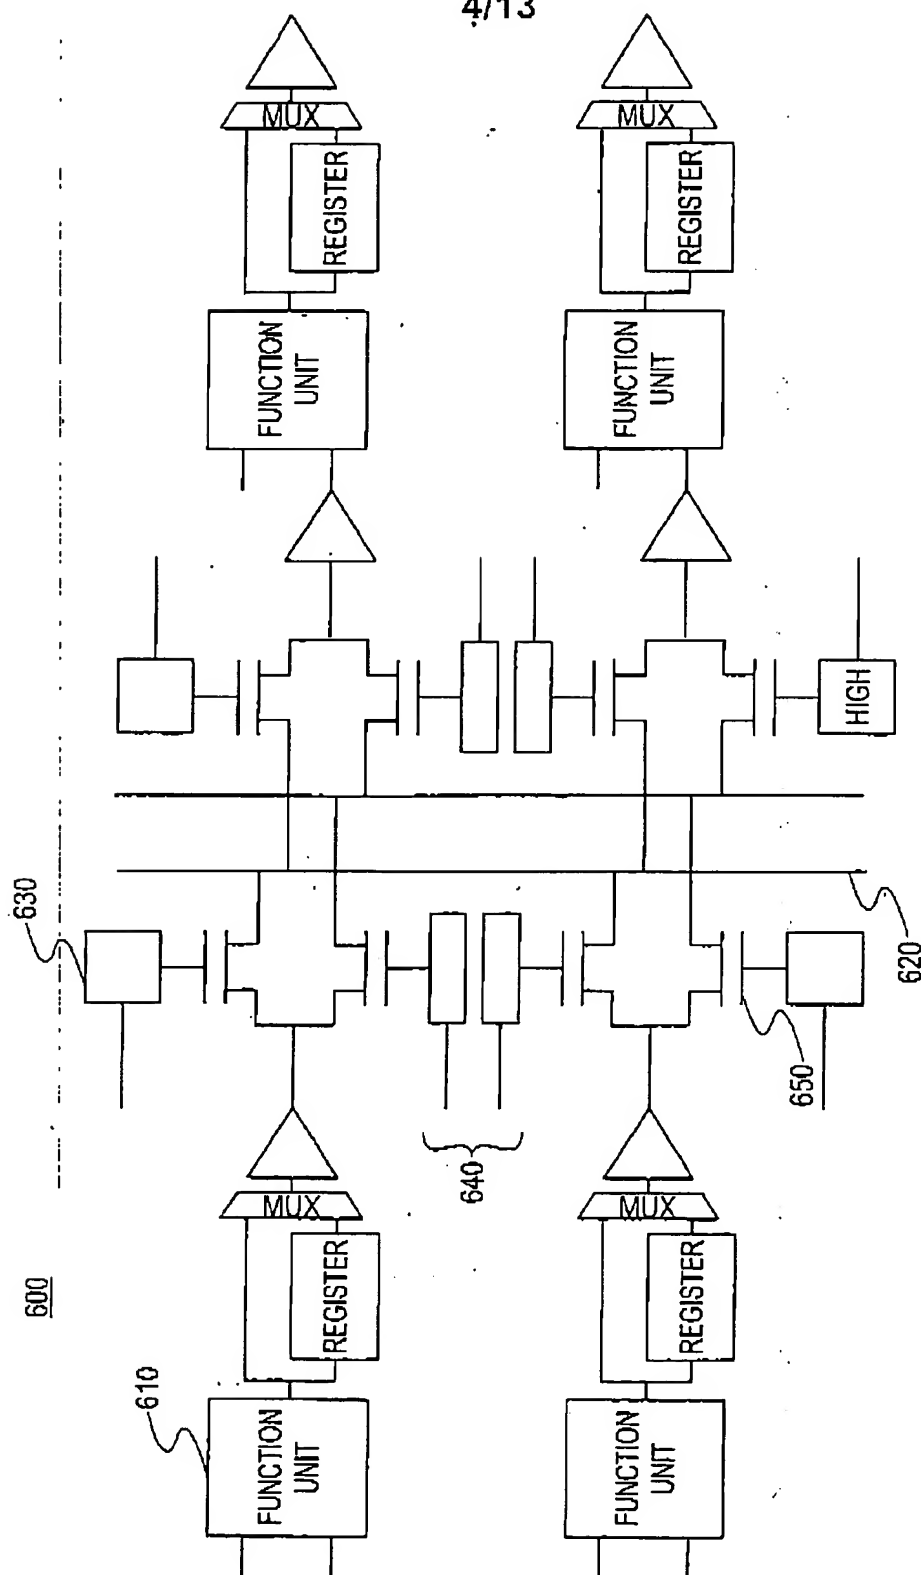


FIG. 6

5/13

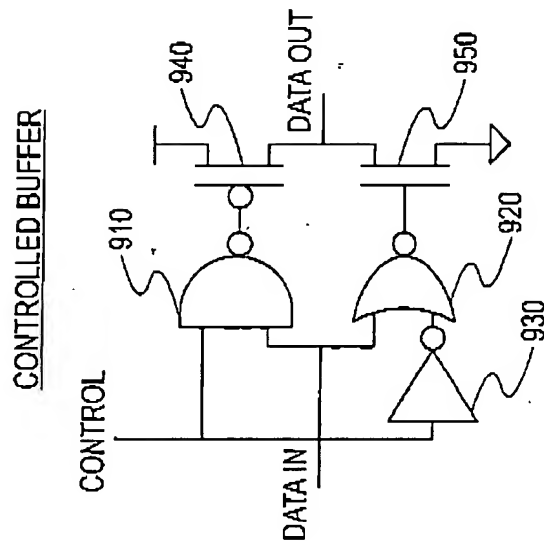


FIG. 9

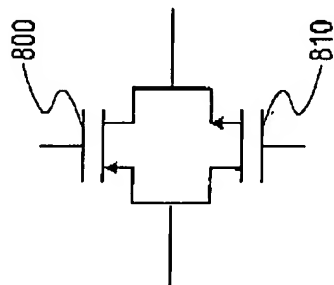


FIG. 8


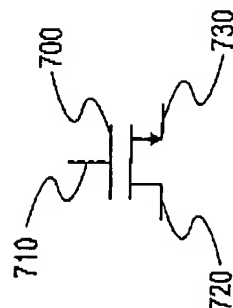


FIG. 7

6/13

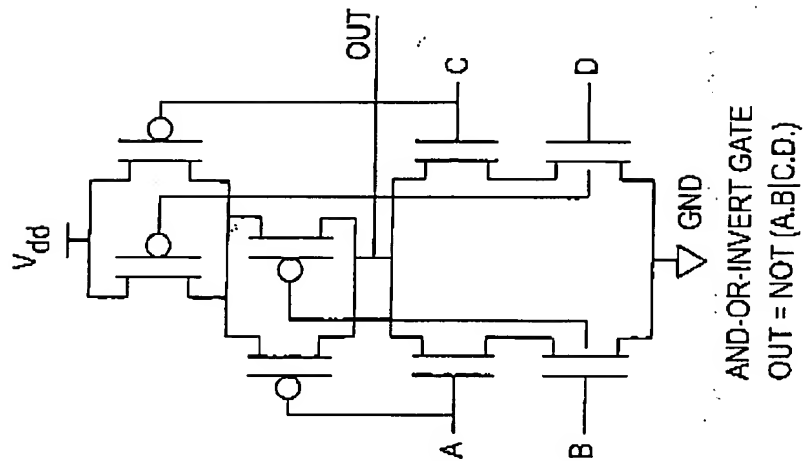

7/13

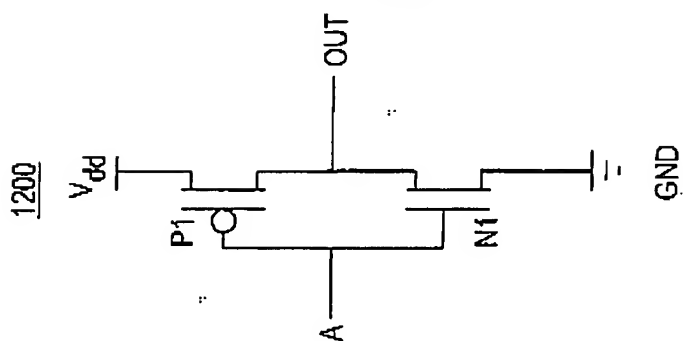


FIG. 12

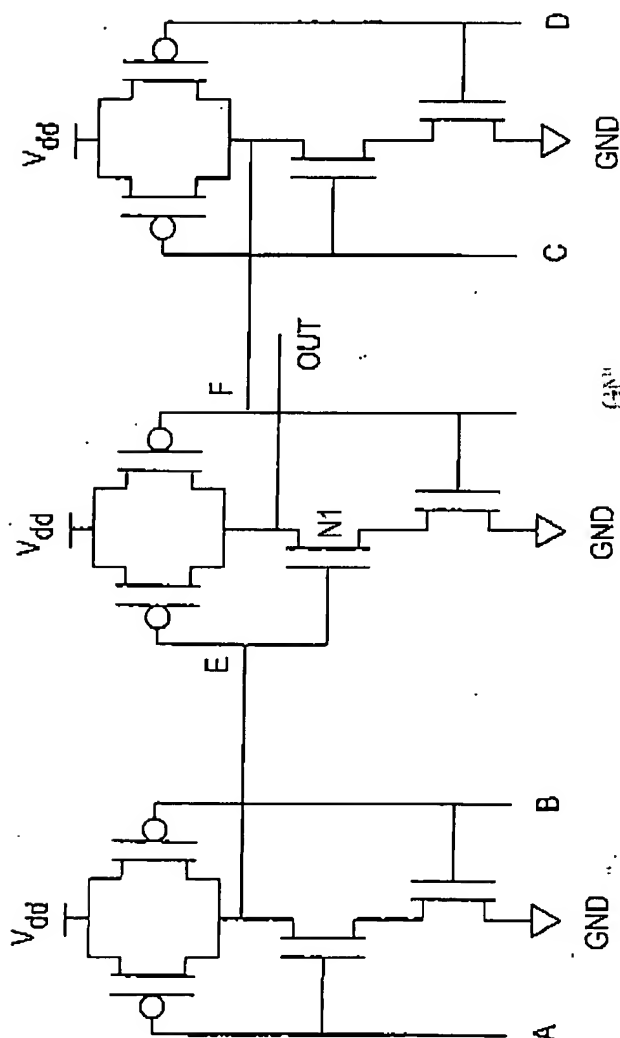


FIG. 11

8/13

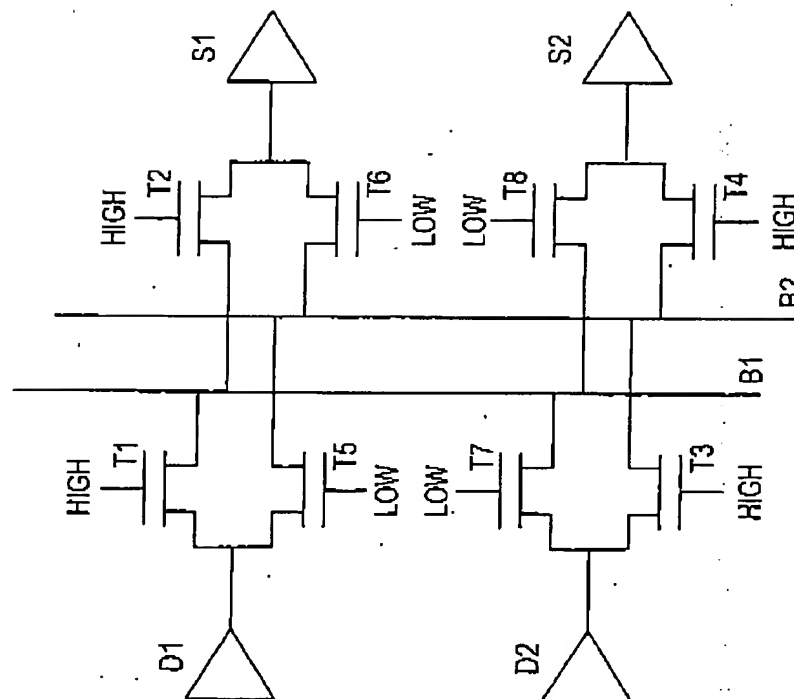


FIG. 13

9/13

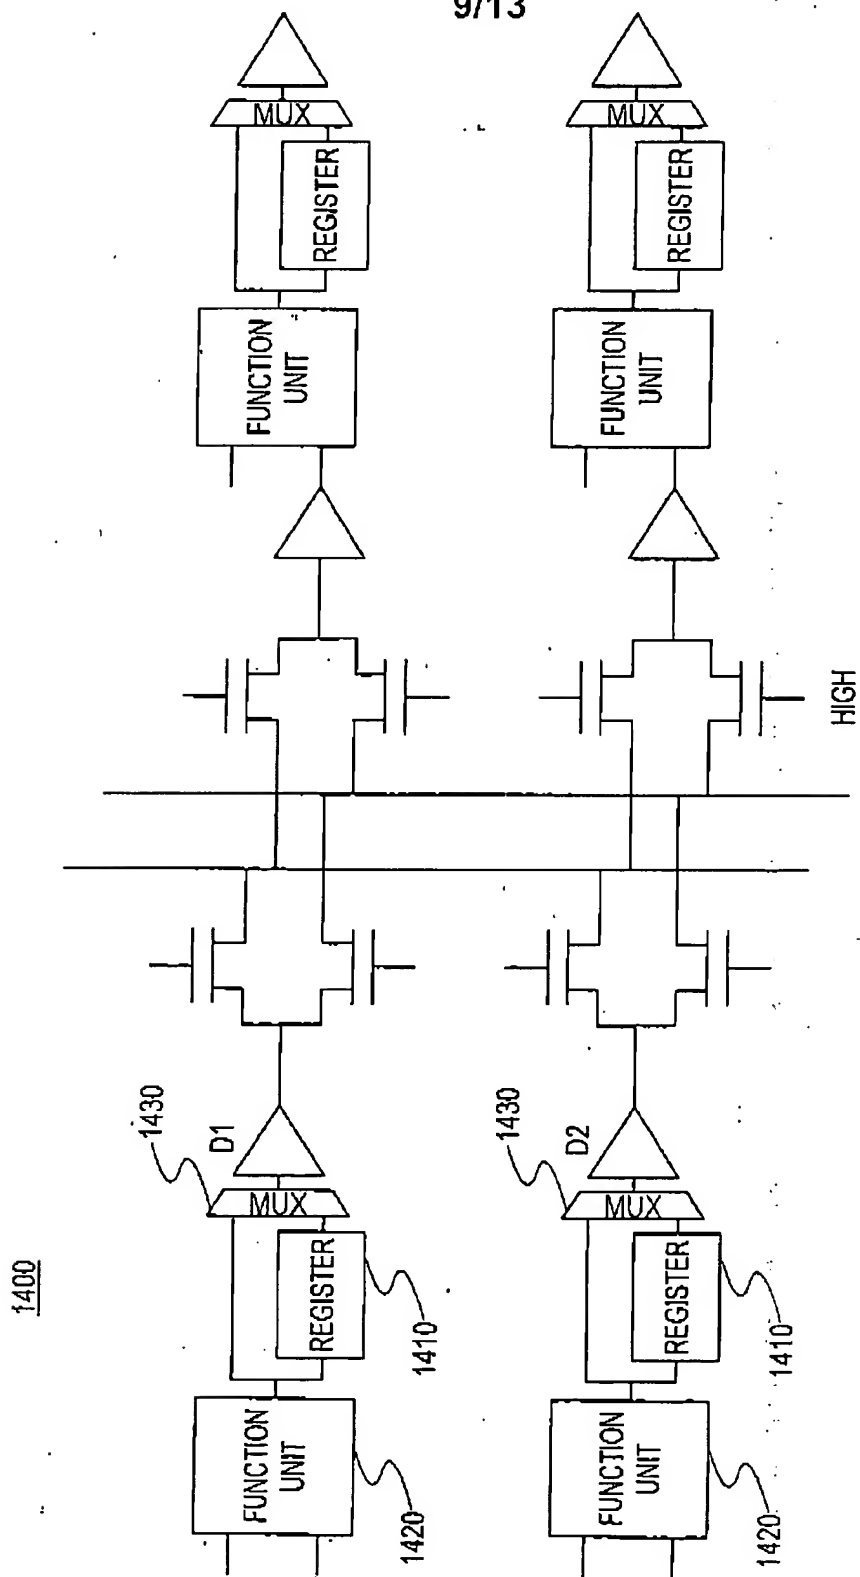


FIG. 14

10/13

TRISTATE BUFFER

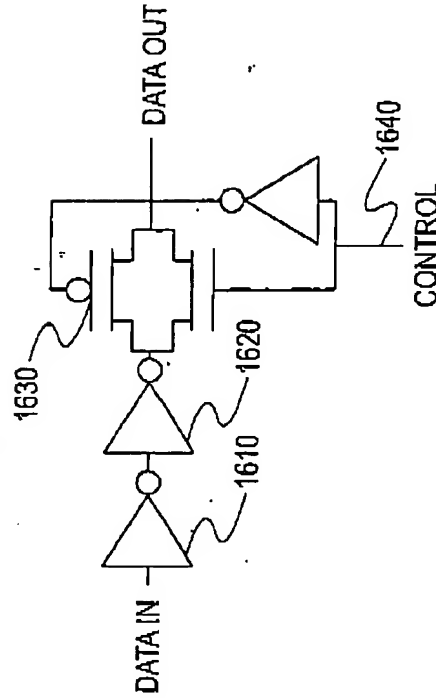


FIG. 16A


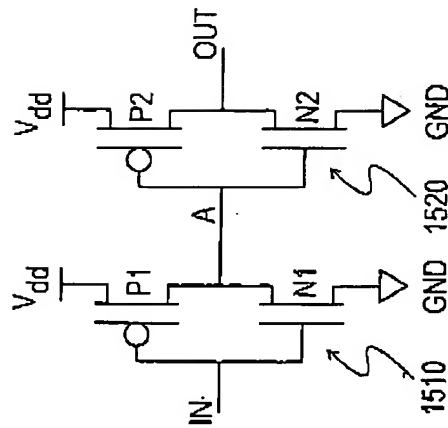


FIG. 15

11/13

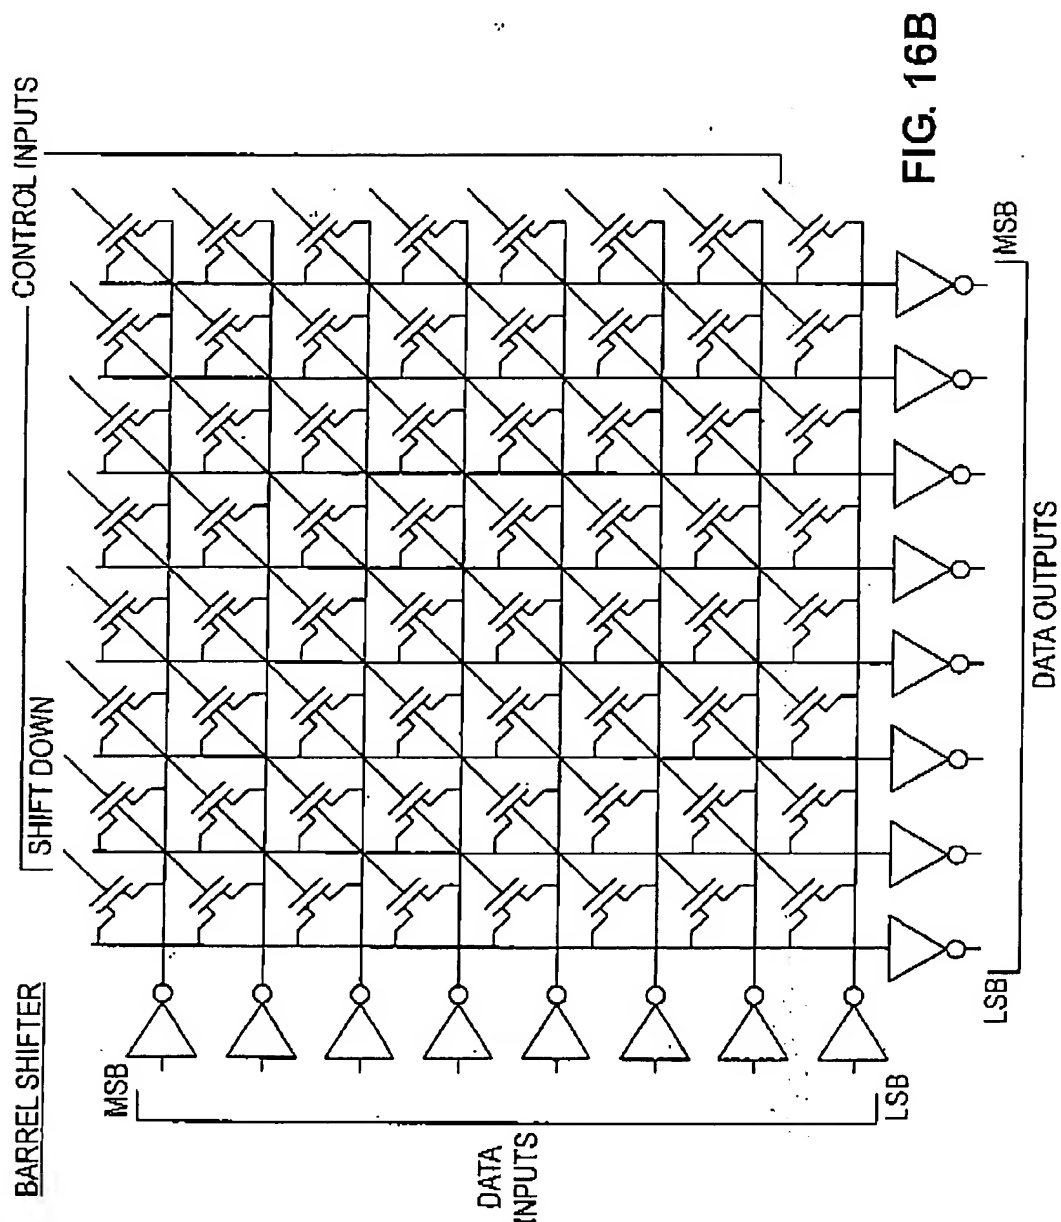

12/13

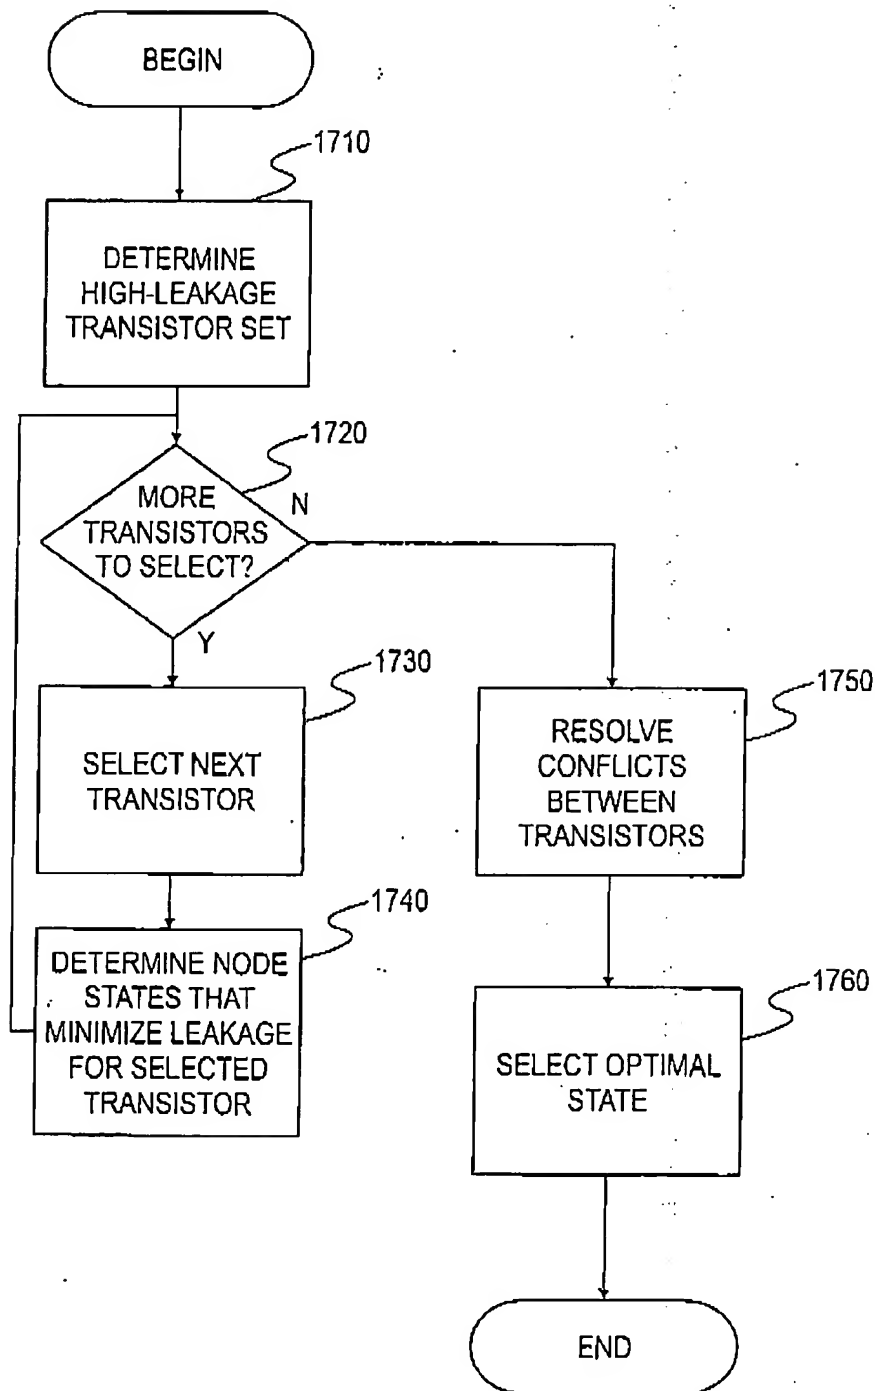


FIG. 17

13/13

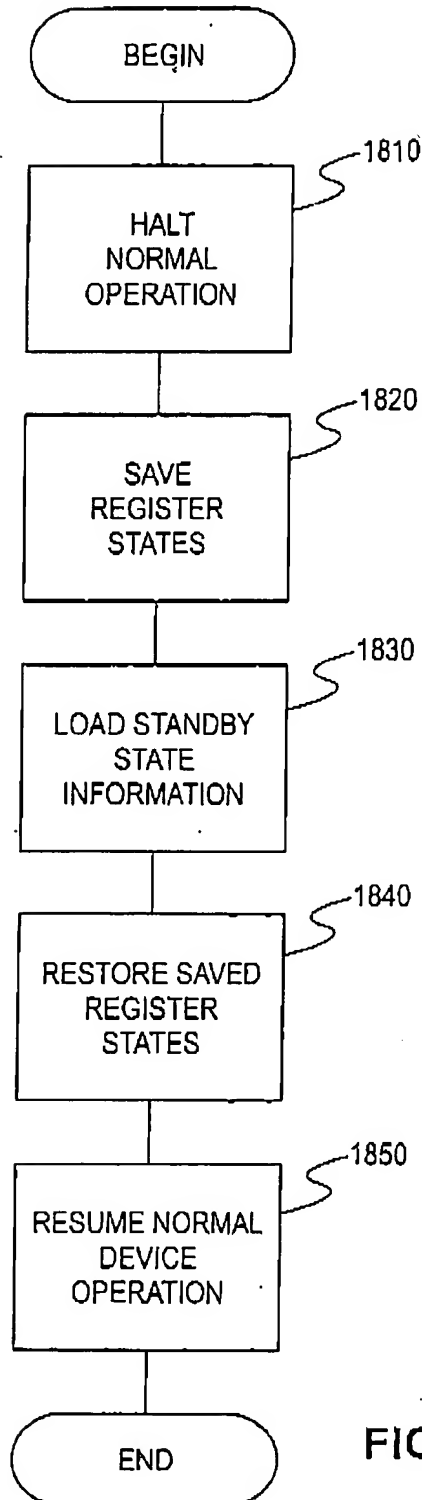


FIG. 18